


ASSEMBLY DIAGRAM

Jula item 024399

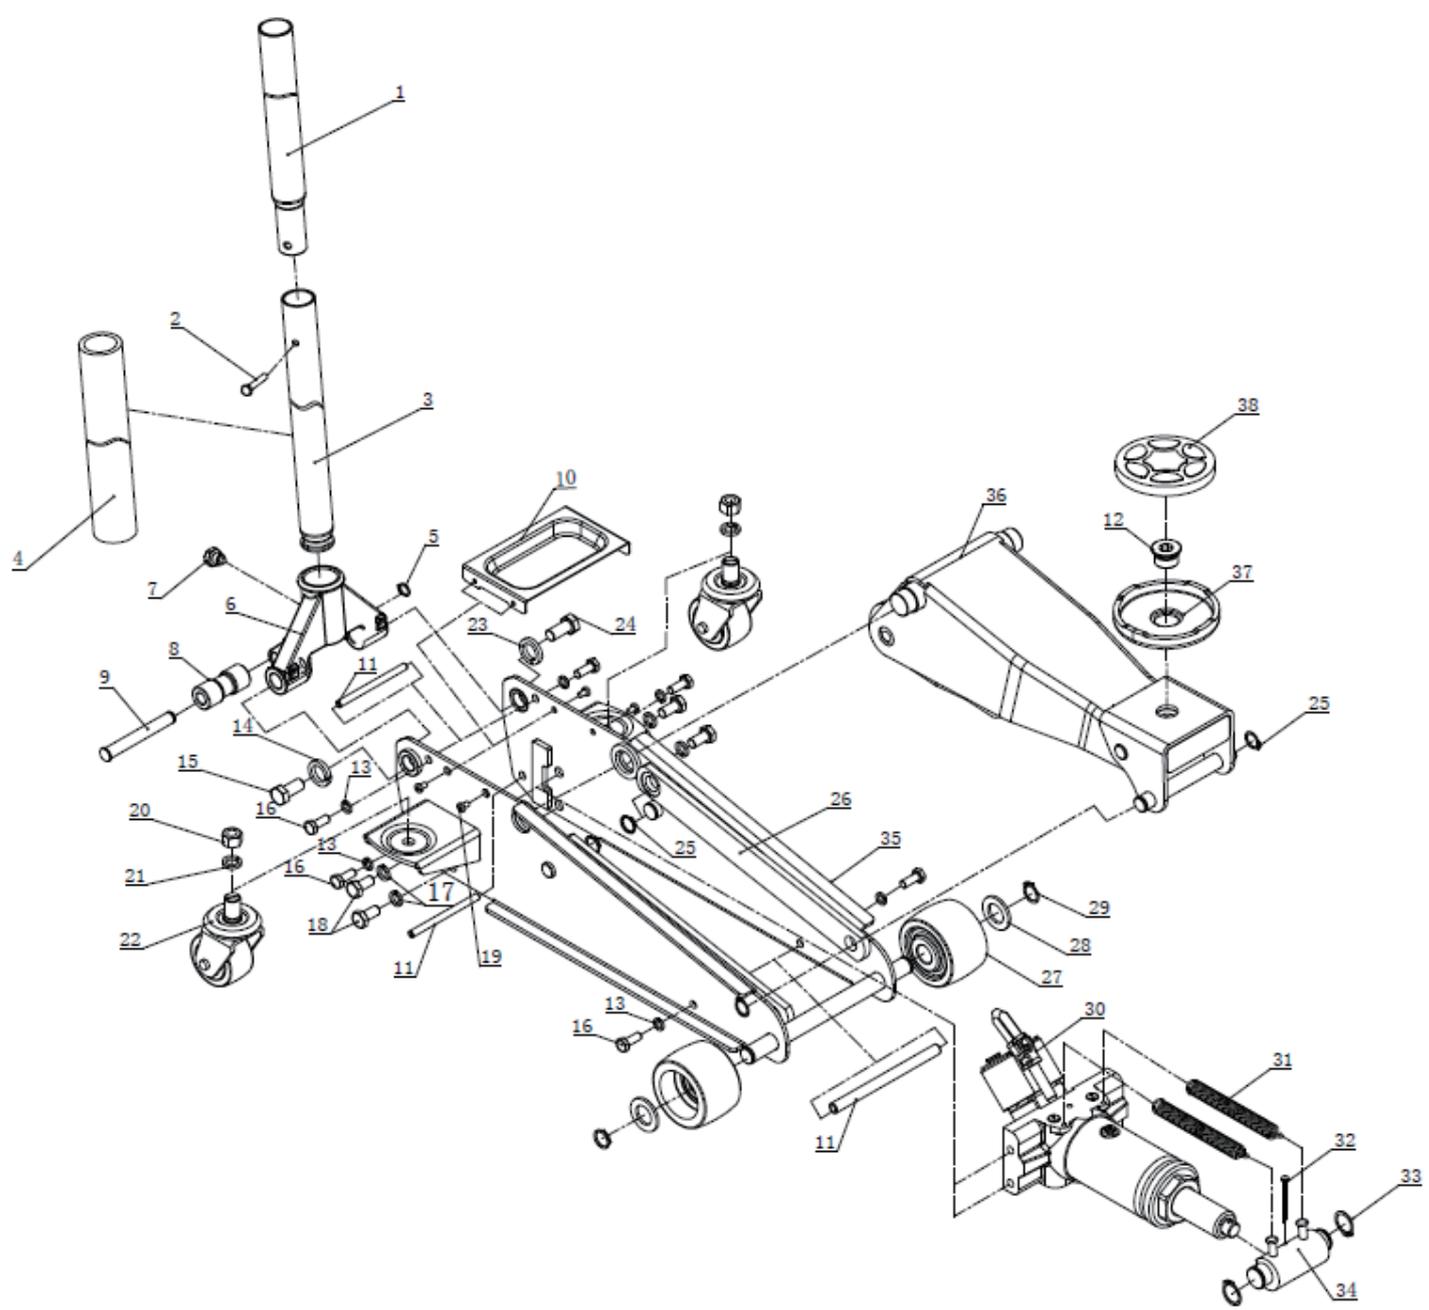

PART LIST

Part No.	Description	Qty.	Part No.	Description	Qty.
1	Upper Handle Tube	1	20	Nut	2
2	Bolt	1	21	Lock Washer	2
3	Lower Handle Tube	1	22	Caster	2
4	Handle Foam	1	23	Lock Washer	1
5	Retainer Ring	1	24	Bolt	1
6	Handle Socket	1	25	Retainer Ring	4
7	Screw	1	26	Adjust Plate	2
8	Roller Wheel	1	27	Front Wheel	2
9	Pin	1	28	Retainer Ring	2
10	Tool Tray	1	29	Retainer Ring	2
11	Limited Rod	3	30	Pump	1
12	Screw	1	31	Spring	2
13	Lock Washer	6	32	Cotter Pin	1
14	Lock Washer	1	33	Retainer Ring	2
15	Bolt	1	34	Piston Adaptor	1
16	Bolt	6	35	Frame	1
17	Lock Washer	4	36	Lifting Axle	1
18	Bolt	4	37	Adaptor	1
19	Screw	4	38	Rubber Pad	1