


Jula item 024393

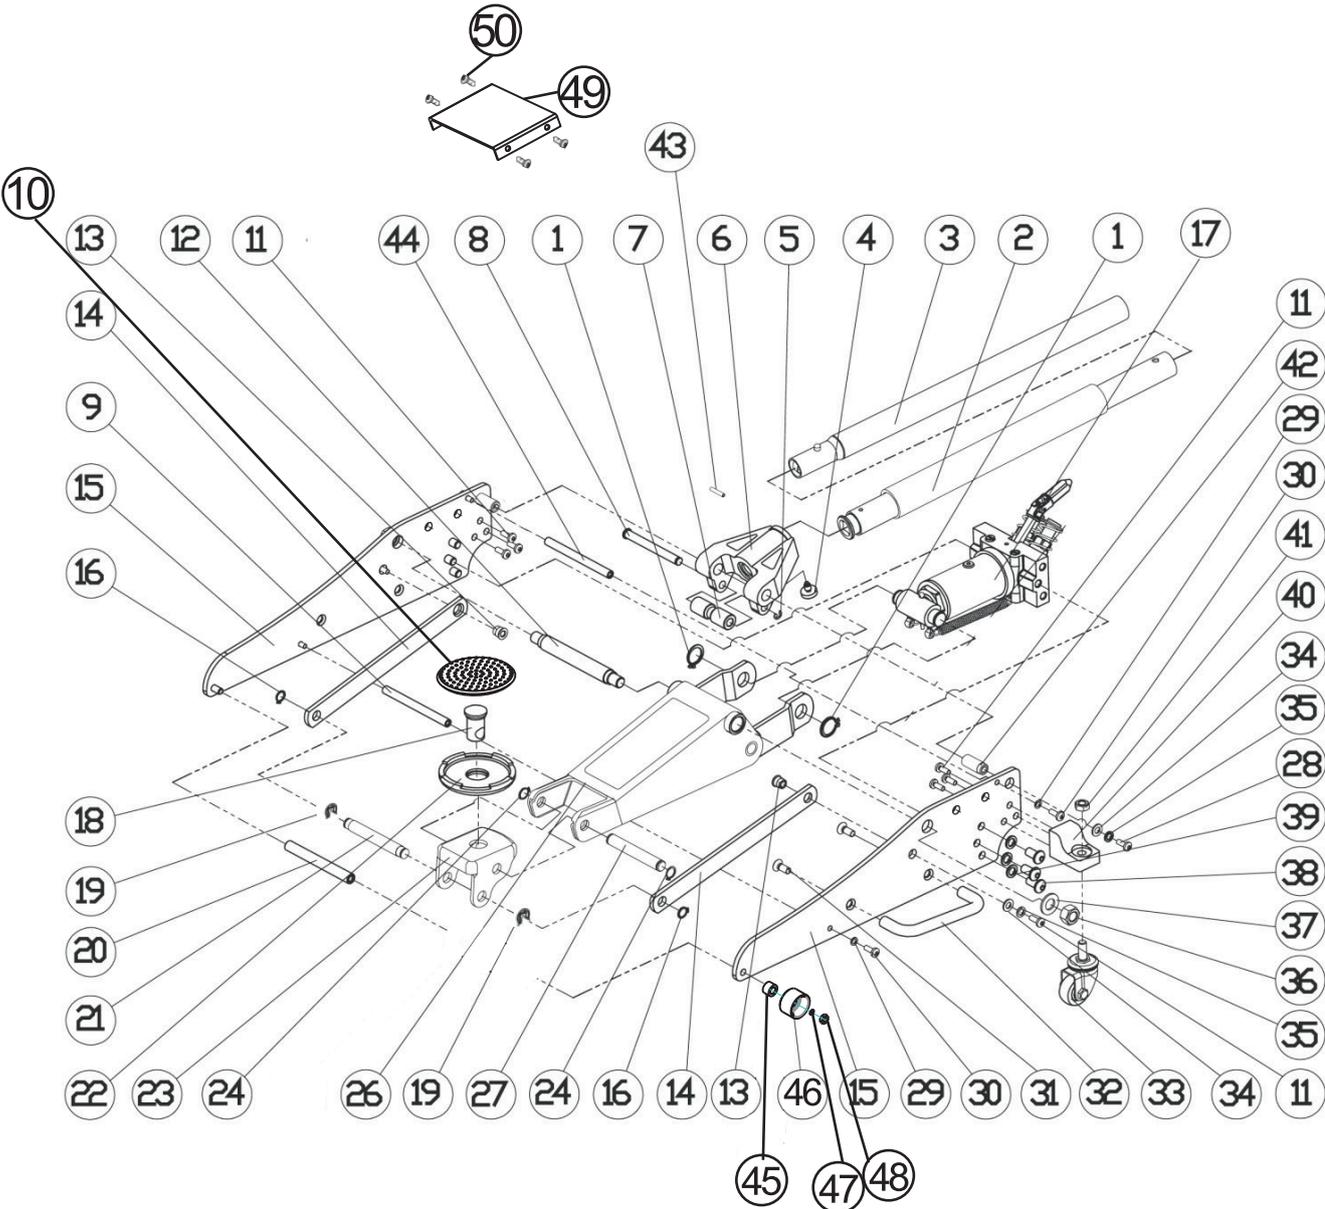


# PARTS LIST

Part No.	Description	QTY
1	Snap spring	2
2	Front handle	1
3	Following handle	1
4	Handle screw	1
5	Snap spring	1
6	Handle socket	1
7	Roller	1
8	Pin shaft	1
9	Join shaft	2
10	Rubber housing	2
11	Screw	10
12	Supporting axle	1
13	Join pin	2
14	Connecting rod	2
15	Slide plate	2
16	Snap spring	2
17	Power unit assembly	1
18	Saddle shaft	1
19	Pin shaft cover	2
20	Front wheel shaft	1
21	Pin shaft	1
22	Saddle	1
23	Saddle support	1
24	Snap spring	2
25	Front wheel assembly	1
26	Lift arm assembly	1

Part No.	Description	QTY
27	Pin shaft	1
28	Screw	2
29	Spring washer	4
30	Screw	4
31	Screw	2
32	Handle	1
33	Rear wheel assembly	2
34	Flat washer	4
35	Spring washer	4
36	Nut	2
37	Flat washer	2
38	Screw	6
39	Spring washer	6
40	Rear wheel frame	2
41	Nut	2
42	Pin shaft	2
43	Pin	1
44	Limit Lever	1
45	Bushing	2
46	Front Wheel	2
47	Flat Washer	2
48	Nut	3
49	Cover Plate	1
50	Screw	4

# ASSEMBLY DIAGRAMS

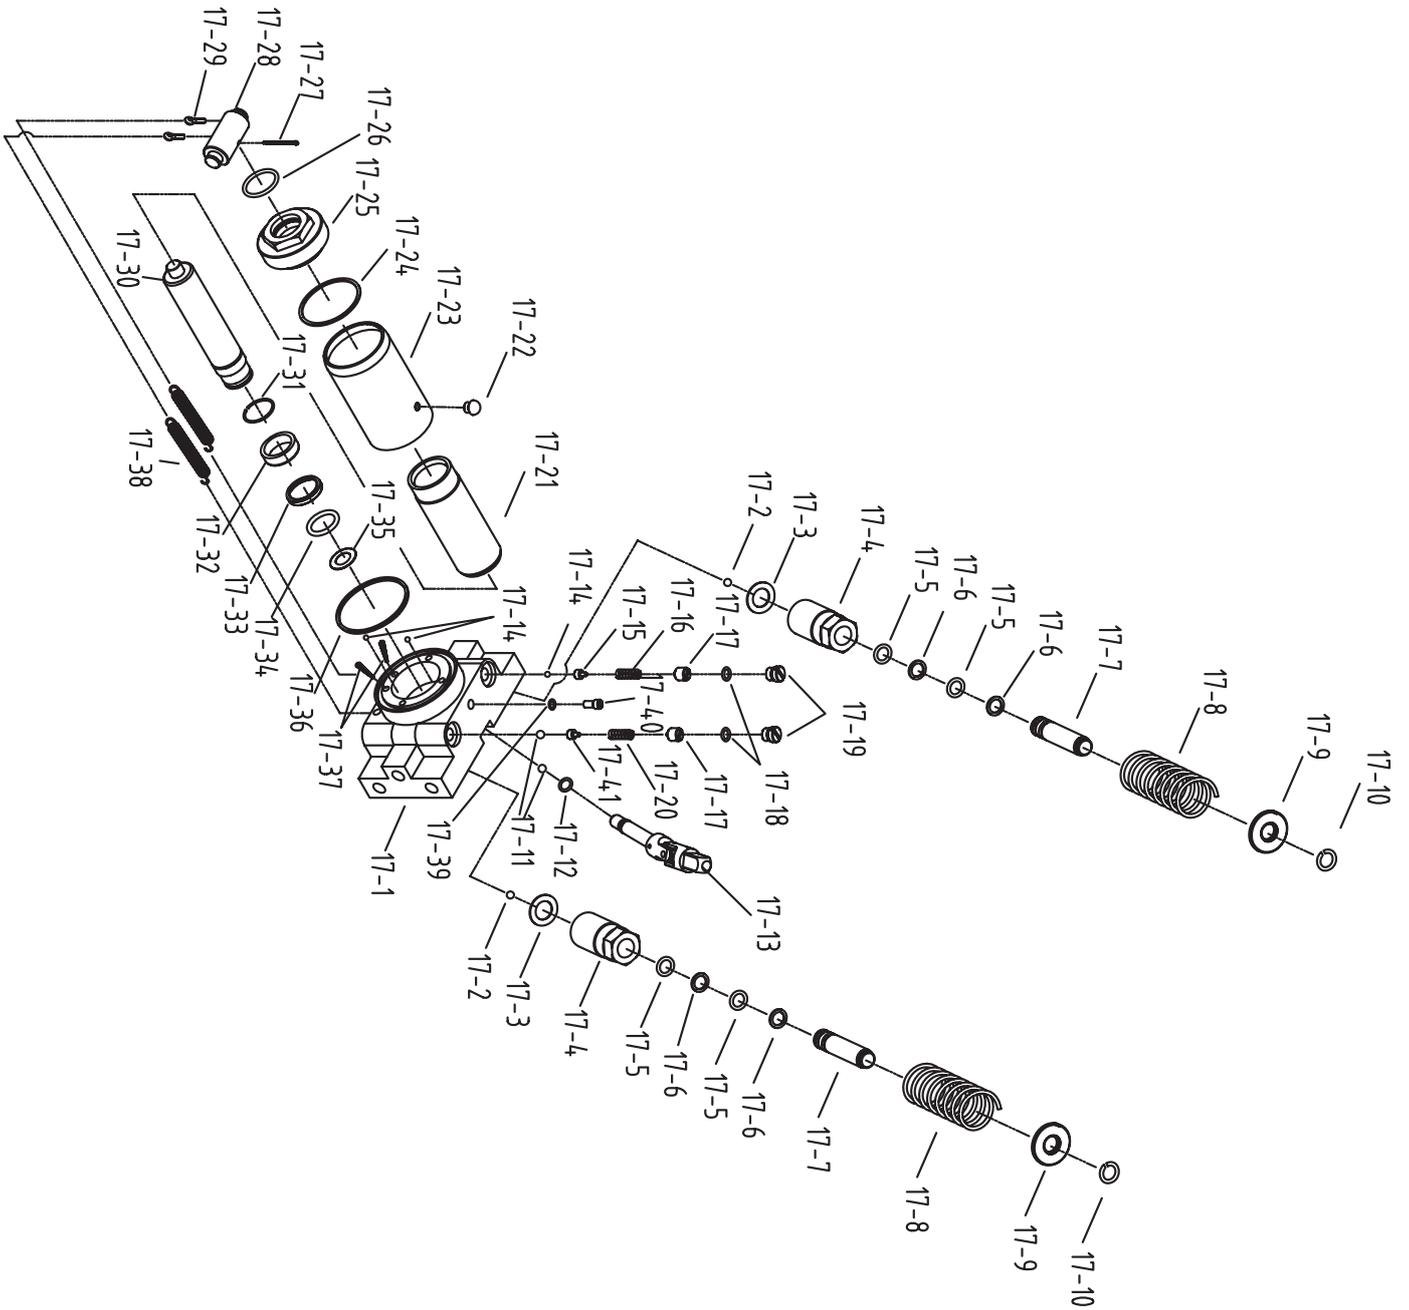

## PARTS LIST

Part. No.	Description	Qty.
17-1	Base	1
17-2	Steel Ball	2
17-3	Copper Washer	2
17-4	Pump cylinder	2
17-5	O-ring	4
17-6	Nylon Gasket	4
17-7	Pump piston	2
17-8	Spring	2
17-9	Cover	2
17-10	Washer	2
17-11	Steel Ball	2
17-12	O-ring	1
17-13	Release Rod	1
17-14	Steel Ball	3
17-15	Ball Seat	1
17-16	Spring	1
17-17	Valve Screw	2
17-18	Seal	2
17-19	Valve Screw	2
17-20	Spring	1
17-21	Cylinder	1

Part. No.	Description	Qty.
17-22	Oil Plug	1
17-23	Reservoir	1
17-24	Seal	1
17-25	Top Cap	1
17-26	O-ring	1
17-27	Pin	1
17-28	Join Block	1
17-29	Screw	2
17-30	Piston Rod	1
17-31	Snap Ring	1
17-32	Ring	1
17-33	Gasket	1
17-34	O-ring	1
17-35	Copper Washer	1
17-36	Seal ring	1
17-37	Oil filter	2
17-38	Sping	2
17-39	Copper washer	1
17-40	Screw	1
17-41	Ball Seat	1