



LS400H SPARE PARTS LIST

NO	Description	QTY	NO	Description	QTY
1	Switch	1	48	nut M4	4
2	Cross groove head ScrewM4×55	4	49	Flat washer 14	1
3	Saw blade guard assembly	1	50	hex bolt M6x25	3
4	Round plug	2	51	hex bolt M8X60	2
5	Inner flange	1	52	Inner-hex screw M5X20	2
6	Saw blade	1	53	Lower cover	1
7	Outer flange	1	54	Inner-hex bolt M6X12	4
8	Flat washer 20	1	55	Cross head Screw M5×10	4
9	Nut M20	1	56	Motor fixing belt	1
10	Guard cover	1	57	hex bolt M8X20	4
11	Aluminium rivet	22	58	Lower cover for saw blade guard	1
12	Plastic sticker 2	2	59	Support plate	1
13	Plastic sticker 3	2	60	Fixing plate	1
14	Plastic sticker 4	4	61	Lock spring	1
15	Removable guard (right)assembly	1	62	Lock hook	1
16	Removable guard (left)assembly	1			
17	Gauge bar	1			
18	Inner-hex bolt M8×80	2			
19	Flat Washer 8	16			
20	Anti-loose nut 8	16			
21	Fixing seat	1			
22	Spring	1			
23	Spring bar	1			
24	Inner-hex bolt M8×70	2			
25	Pull rod	2			
26	Inner-hex bolt M6×40	4			
27	Anti-loose nut M6	5			
28	Protective plate on working table	1			
29	Screw knob	3			
30	Cross groove head ScrewM8×10	3			
31	Support fram	1			
32	Handle	2			
33	hex bolt M6×12	3			
34	Flat washer 6	14			
35	Working table assembly	1			
36	Extend holder assembly	1			
37	Folding rod I assembly	1			
38	Folding rod II	1			
39	Diagonal brace	1			
40	Rotary knob	1			
41	Small plastic plug	3			
42	Big plastic plug	4			
43	Motor	1			
44	hex bolt M8×20	4			
45	hex bolt M8×20	35			
46	Big hex bolt M6×15	1			
47	Cross head Screw M5×15	1			