



JL811205 part list

No	Description	Qty
1	Plastic cover	1
2	overload protector 5A	1
3	ring shield Φ 14	1
4	motor fan	1
5	motor back bracket	1
6	ball bearing6202	1
7	rotor	1
8	ball bearing 6003	1
9	oil seal	1
10	3 in 1 screw M4*10	1
11	external tooth washer Φ 4	1
12	outer hexagon bolt M5*85	4
13	spring washer Φ 5	4
14	statot	1
15	seping washer Φ 6	4
16	hexagon socket head cap screw M6*20	4
17	cylinder	1
18	connecting rod	1
19	circlip for hole Φ 12	2
20	piston	1
21	valve plate	1
22	compression ring	2
23	oil ring	1
24	piston pin	1
25	end wire connector CE-2	2
26	capacitor	1
27	air filter	1
28	hexagon socket head cap screw M6*35	4
29	cylinder head	1
30	cylinder head gasket	1
31	valve plate assembly	1
32	L-connector	1
33	intake valve plate	1

No	Description	Qty
34	valve plate locating pin	2
35	cylinder gasket	1
36	crankcase	1
37	crankshaft	1
38	oil baffle plate	1
39	crankcase cover	1
40	oil mirror	1
41	outer hexagon flange screw M5*14	8
42	crankcase ventilation	1
43	outer hexagon flange face screw M8*25	4
44	lock nut M8	5
45	aluminium pipe	1
46	tank	1
47	axle M10	2
48	lock nut M10	2
49	5" wheel	2
50	drain valve	1
51	hexagon socket head cap screw M8*30	1
52	flat washer Φ 8	1
53	feet	1
54	end cap	2
55	handle cover	1
56	pressure relief tube assembly	1
57	angle one way valve	1
58	safety valve 8Bar	1
59	pressure switch 6Bar ON 8Bar OFF	1
60	two way connecor	1
61	regulator assembly	1
62	coupler	1
63	power cord	1
64	40 pressure gauge	1
65	50 pressure gauge	1