



18V BRUSHLESS CIRCULAR SAW

No	English Name	Quantity
1	Hex wrench	1
2	Screw	14
3	Rear cover	1
4	Top cover	1
5	Switch spring	1
6	Switch button	1
7	Lock button spring	1
8	Switch lock button	1
9	Switch	1
10	Base cover	1
11	Screw	16
12	Screw	6
13	Motor upper cver	1
14	Motor lower cover	1
15	Stator	1
16	Rator	1
17	Hook	1
18	Screw	2
19	Long pin	2
20	Small gasket	1
21	Wrench fixture	1
22	Big spring	1
23	changing block	1
24	Fix base cover	1
25	Bearing	1
26	Big gear	1
27	Lock block	1
28	Circlip	1
29	Shaft	1
30	Output shaft	1
31	Front cover	1
32	Big spring	1
33	Big gasket	3
34	Screw	1
35	Moving cover	1
36	Protect cover lever	1
37	Shaft circlip	1
38	Fix cover	1
39	Screw	3

No	English Name	Quantity
40	Lower press plate	1
41	Blade	1
42	Upper plate	1
43	Press screw	1
44	Screw	1
45	Gasket	1
46	Screw	1
47	Lock button	1
48	Lock lever	1
49	Small spring	1
50	Woof pad	1
51	Plate	1
52	Light box	1
53	Locate gasket	1
54	Screw	2
55	Depth adjusting lever	1
56	Connecting rod	1
57	Big gasket	1
58	Base assembly	1