

UT22B-EU Voltage Tester User Manual

Preface

Thank you for purchasing the new voltage tester. In order to use this product safely and correctly, please read this manual thoroughly, especially the *Safety Warning* part.

After reading this manual, it is recommended to keep the manual at an easily accessible place, preferably close to the device, for future reference.

Limited Warranty and Liability

Uni-Trend guarantees that the product is free from any defect in material and workmanship within one year from the purchase date. This warranty does not apply to damage caused by accident, negligence, misuse, modification, contamination or improper handling. The dealer shall not be entitled to give any other warranty on behalf of Uni-Trend. If you need warranty service within the warranty period, please contact your seller directly.

Uni-Trend will not be responsible for any special, indirect, incidental or subsequent damage or loss caused by using this device.

I. Safety Warning

This manual contains warning information and safety regulations. Please observe them strictly to ensure the safety of the user and tester.

⚠ Note:

1. Please read and understand all contents of the manual concerning safety, operation and maintenance before using the tester.
2. Uni-Trend is not responsible for any damage caused by improper use or violation of the safety regulations in the manual.
3. This manual is subject to change without prior notice. Safety symbol "⚠" has three meanings in the manual. Users should pay special attention to the operation with the symbol when reading.

⚠	Danger ----- identifies conditions and actions that are likely to pose serious or fatal hazards.
⚠	Warning ----- identifies conditions and actions that may pose serious or fatal hazards.
⚠	Caution ----- identifies conditions and actions that may pose minor injury or damage the tester.

- ⚠ To avoid electric shock, pay special attention when the measured voltage exceeds the personal safety voltage (36V).
- ⚠ Before each use verify tester operation by measuring a known voltage.
- ⚠ Only touch the handle part in using the tester. Keep fingers behind the finger guards and away from the metal probe contacts when making measurements.
- ⚠ Do not use the tester over range (400V).
- ⚠ Do not use the tester or test lead if it appears to be damaged.
- ⚠ Do not use the tester in extreme temperatures or wet weather. Keep the operating temperature between -15°C~45°C and relative humidity less than 85%.
- ⚠ The safety is no longer guaranteed if:
 - There is obvious damage.
 - Functions of the tester are impaired.
 - The tester has been stored at extreme temperatures for a long time.

The meaning of the symbols associated with this tester:

⚠	Danger, Warning or Caution
⊞	Equipment protected throughout by DOUBLE INSULATION or REINFORCED INSULATION
♻	Do not discard the tester or its accessories as unsorted municipal waste. Please dispose properly in accordance with local regulations.
CE	Complies with European Union standards
⚡	Caution, possibility of electric shock
⚡	Suitable for live working
CAT III	It is applicable to testing and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.
ELV	Extra Low Voltage (Voltage below 50V a.c. or 120V d.c.)
Time rating	specified on-load time during which the voltage detector is able to operate correctly
Recovery time	minimum no-load time between two uses as specified by the manufacturer

II. Introduction


The UT22B-EU is an automatic voltage tester that tests AC/DC voltages from 12V to 400V. It is designed for electricians and homeowners alike. It is available for residential or commercial use, and tests sockets, appliances, etc.

Features:

- Test ranges of AC/DC voltage: 12V, 24V, 50V, 120V, 230V, 400V
- Automatic identification of AC/DC voltage
- Automatic identification of DC voltage polarity
- Hazardous voltage indicator
- Complies with IP54, RoHS, CE, and CAT III 400V standards

III. Structure

- a. Test probe (-)
- b. Test probe (+)
- c. Hazardous voltage indicator
- d. Voltage level indicators
- e. AC/DC voltage indicators

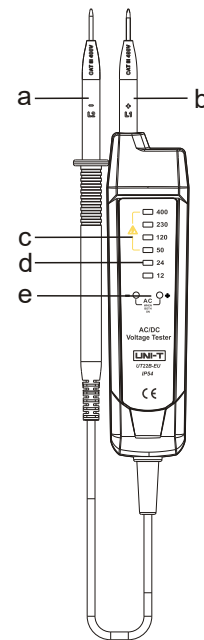

IV. Operating instructions

In a safe operating environment, connect the test probes to the circuit under test. The voltage level indicators will illuminate indicating the voltage present. The range of the measured voltage can be judged based on the status of the indicators. When DC voltage is detected, the "+" or "-" polarity indicator will illuminate, revealing the polarity. When AC voltage is detected, both polarity indicators will illuminate.

⚠ **If the range of the measured voltage can be clearly determined, please stop testing. The testing time should be less than 5s to ensure the service life of the tester.**

⚠ **If the voltage under test is less than 10V, the tester may not detect it. At this time, the 12V LED voltage level indicator may be on or off.**

⚠ **Do not attempt to measure AC/DC voltage in excess of 400V under any circumstances. The hazardous voltage indicator will illuminate in the presence of voltage exceeding 50V AC or DC, with characteristics as detailed in the table below:**

Hazardous voltage indicator status	AC voltage	DC voltage
Solid on	>50V	>50V
Blinking at approx. 1.5Hz	>400V	>400V

V. Specifications

1. General specifications

- Operating altitude: Up to 2000m
- Relative humidity: <85% non-condensing
- Operating temperature: -15°C~45°C
- Storage temperature: -20°C~60°C
- Dimensions: 265mm*42mm*27mm
- Weight: 136g
- Drop protection: 2m
- Ingress protection: IP54
- Safety rating: CAT III 400V
- Pollution degree: 2
- Recovery time: <5s
- Time rating: >600s
- 17kΩ@ELV a.c. : When voltage below 50Vac, the tester internal impedance is 17kΩ
- Standards: EN61326-1:2013, EN61326-2-2:2013, EN61243-3:2014

2. Electrical specifications

- Voltage level indicators:
AC: 12V, 24V, 50V, 120V, 230V, 400V
DC: 12V, 24V, 50V, 120V, 230V, 400V
- Polarity indicators:
DC Positive: (+) LED illuminated
DC Negative: (-) LED illuminated
Both (+/-) LED illuminated indicates AC
- Hazardous voltage indicator:
Solid on when voltage >50V
Blinking at 1.5Hz when voltage >400V
- Input protection: 400V AC/DC
- Maximum measurable voltage: 400V AC/DC
- Accuracy: Voltage level indicators typically illuminate fully at approx. 70% to 100% of indicated voltage, except for 12V AC/DC (50% to 100%)
- AC frequency: 50Hz/60Hz

VI. Maintenance and Cleaning

1. If an abnormal phenomenon occurs or the tester malfunctions during normal operation, please stop using it immediately and contact your seller for confirmation.
2. Remove the test probes from the circuit under test before cleaning. Wipe the tester surface with a clean, dry lint-free cloth. Do not use abrasive cleaners or solvents. Make sure the tester is ventilated and dry before using.

UNI-T

UNI-TREND TECHNOLOGY (CHINA) CO., LTD.

No. 6, Gong Ye Bei 1st Road,
Songsan Lake National High-Tech Industrial
Development Zone, Dongguan City,
Guangdong Province, China

彩盒 菲林做货要求

序号	项目	内容	备注	
1	尺寸	展开:210*260mm 折后: 105*65mm		
2	材质	60g书纸		
3	颜色	单色		
4	外观要求	完整清晰、版面整洁, 无斑墨、残损、毛边、刀线错位等缺陷。		
5	装订方式			
6	表面处理			
7	其它	无		
版本		REV. 0		
DWH 设计	宣浩	MODEL 机型: Ut22B-EU系列		Part NO. 物料编号: P/N:110401109039X
CHK 审核				
APPRO. 批准			 优利德科技(中国)有限公司 UNI-TREND TECHNOLOGY (CHINA) LIMITED	