



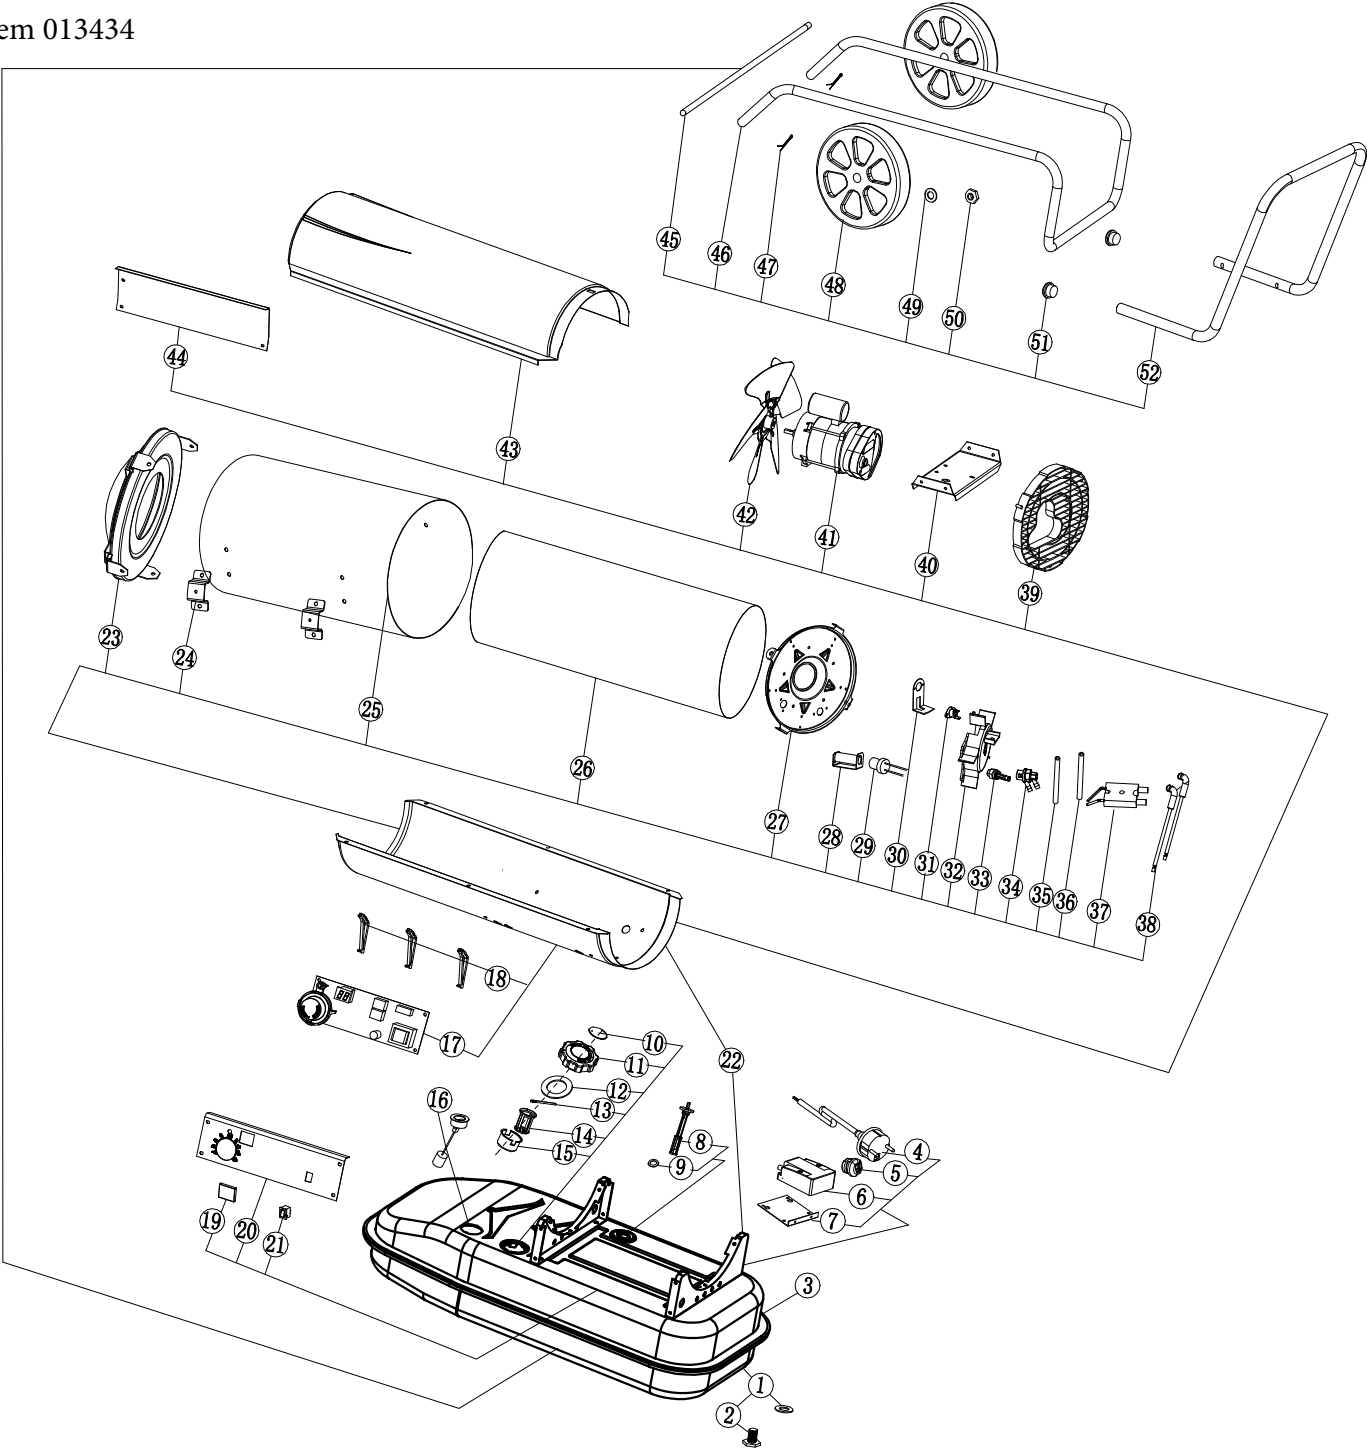

Key No	Description	Key No	Description
1	Oil drain seal ring	26	Combustion chamber
2	Oil drain screw	27	Burner support plate
3	Re-set thermostat bracket	28	Photocell ass'y bracket
3	Fuel tank	29	Photocell ass'y
4	Powercord	31	Re-set thermostat
5	Cable fastener	32	Burner head
6	Ignition transformer	33	Nozzle assembly
7	Bracket of Ignition transformer	34	Nozzle Adapter
8	Fuel filter ass'y	35	Gas hose
9	Sealing ring	36	Oil hose
10	Breath cover	37	Ignition needle
11	Fuel tank cap	38	High voltage cable
12	Sealing ring	39	Air inlet grill
13	Tank cap shaft	40	Motor support
14	Oil inlet filter	41	Motor assembly
15	Oil inlet filter holder	42	Fan
16	Oil leveler	43	Top cover
17	PowerPCB	44	Side plate
18	PCB bracket	45	wheel axle
19	Display window	46	Feet pipe
20	Control panel	47	Cotter pin
21	On/off switch	48	Wheel
22	Bottom cover	49	Flat gasket
23	Front cover ass'y	50	Screw nut
24	Chamber shield bracket	51	Steel pipe plug
25	Combustion chamber shield	52	Handle

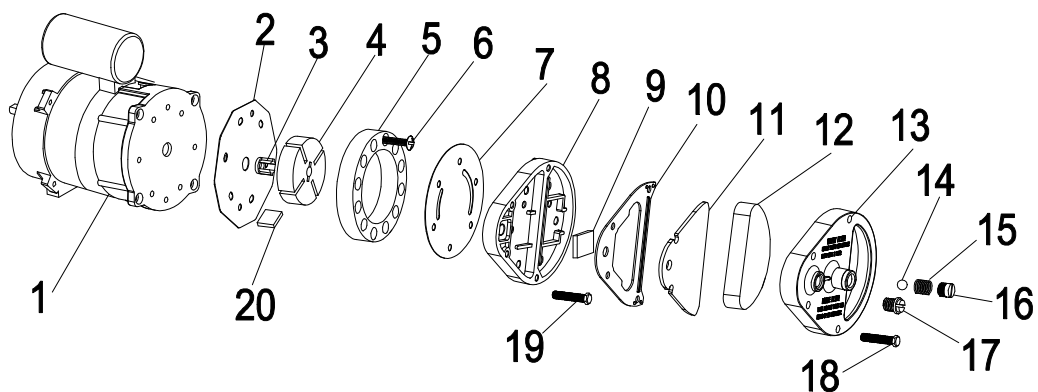

ITEM	PART#	DESCRIPTION	QTY
1		Motor	1
2		Stainless steel slice A	1
3		Coupling	1
4		Rotor	1
5		Stator Ring	1
6		Screw,	2
7		Stainless steel slice B	1
8		Pump Cover	1
9		Lint Filter	1
10		Rubber seal	1
11		Air outlet filter	1
12		Inlet Filter	1
13		Filter Cover	1
14		Steel ball	1
15		Spring	1
16		Pressure adjustment screw	1
17		Screw plug	1
18		Screw,	4
19		Screw,	6
20		Rotor blade	4