


Jula item no 016131

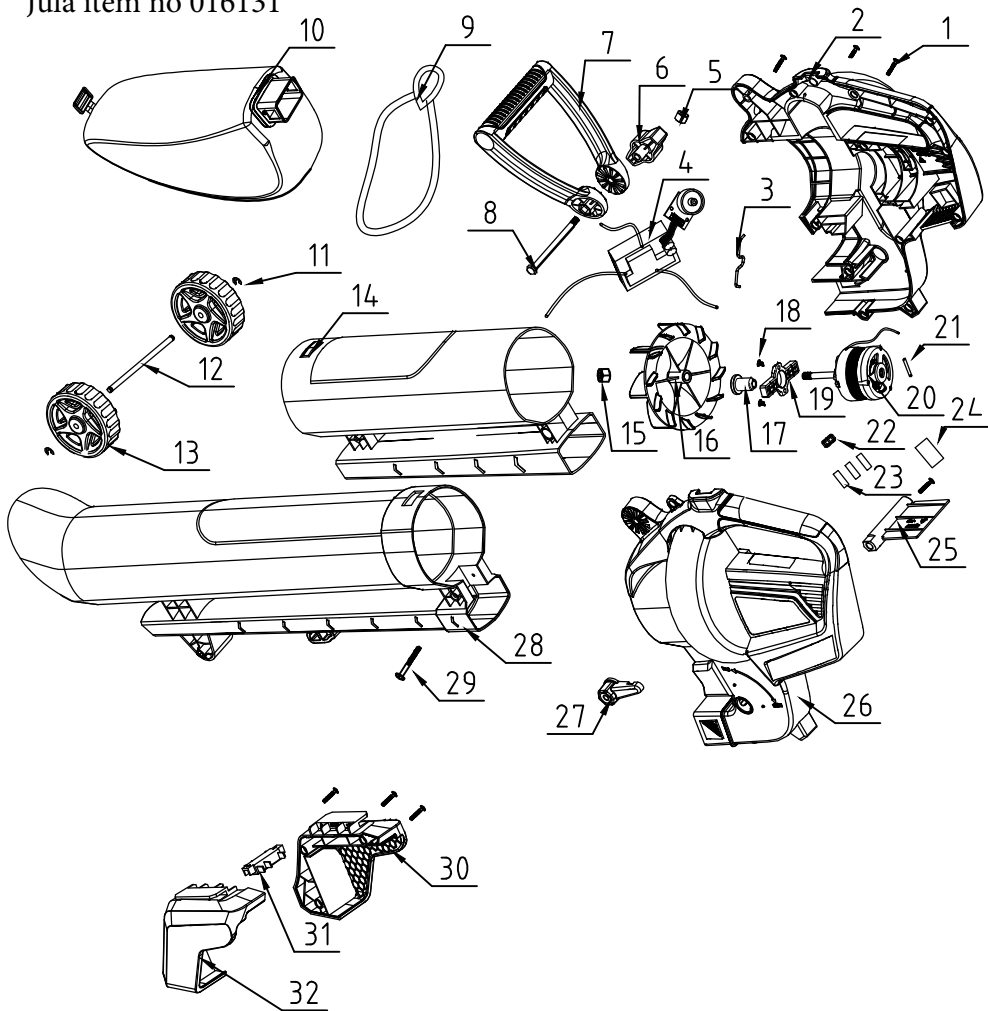

Spare parts list for the 40V Blower&Vaccum

BOMKEY	ITEM	STANDARD	DESCR	QTY
D636	1	320200012	ST4.2x16-H-F cross head self-tapping screw	17
D64D	2	80300760-03	right housing	1
D66F	3	331100253	anti-static wire mesh	1
D673	4	80101207-01	controller	1
D679	5	320400045	M6 hex nut	1
D685	6	230400495	lock-in knob	1
D68B	7	80300763-02	auxiliary handle	1
D6A0	8	320200418	M6x95 hex head screw	1
D6A6	9	312200003	single belt	1
D6AC	10	80400262-02	dust bag assy	1
D6B2	11	320500131	5 split washer	2
D6BD	12	330900785	axle	1
D6C3	13	80300250-06	edging wheel	2
D6DF	14	80300761-02	blow&vac tube	1
D6E5	15	320400089	M8x1.25 hexagon flange nut	1
D6EC	16	220400188	aluminum centrifugal fan	1
D6F3	17	80201398-01	axle sleeve	1
11F55	18	320200285	M5x10 cross head screw	2
11F59	19	80201397-01	motor support	1
11F5D	20	260300001	brushless motor 6420	1
11F61	21	5080070	φ5 heat-shrinkable tube	1
11FA6	22	80600330-01	the circular inductors	1
11FAA	23	80600331-01	the circular inductors	3
11FB3	24	80600294-01	magnetic snap	1
11FB7	25	230400497	switch panel	1
11FBB	26	80300759-03	left housing	1
11FBF	27	80300766-03	switching knob	1
11FD8	28	80300762-02	2 blowing&vac tube	1
11FDC	29	320200419	ST4x45 stay-in screws	1
13893	30	80300769-03	right pylons	1
13894	31	340400632A	insert with three copper sheet	1
13895	32	80300768-03	left pylons	1