


Jula item 013712

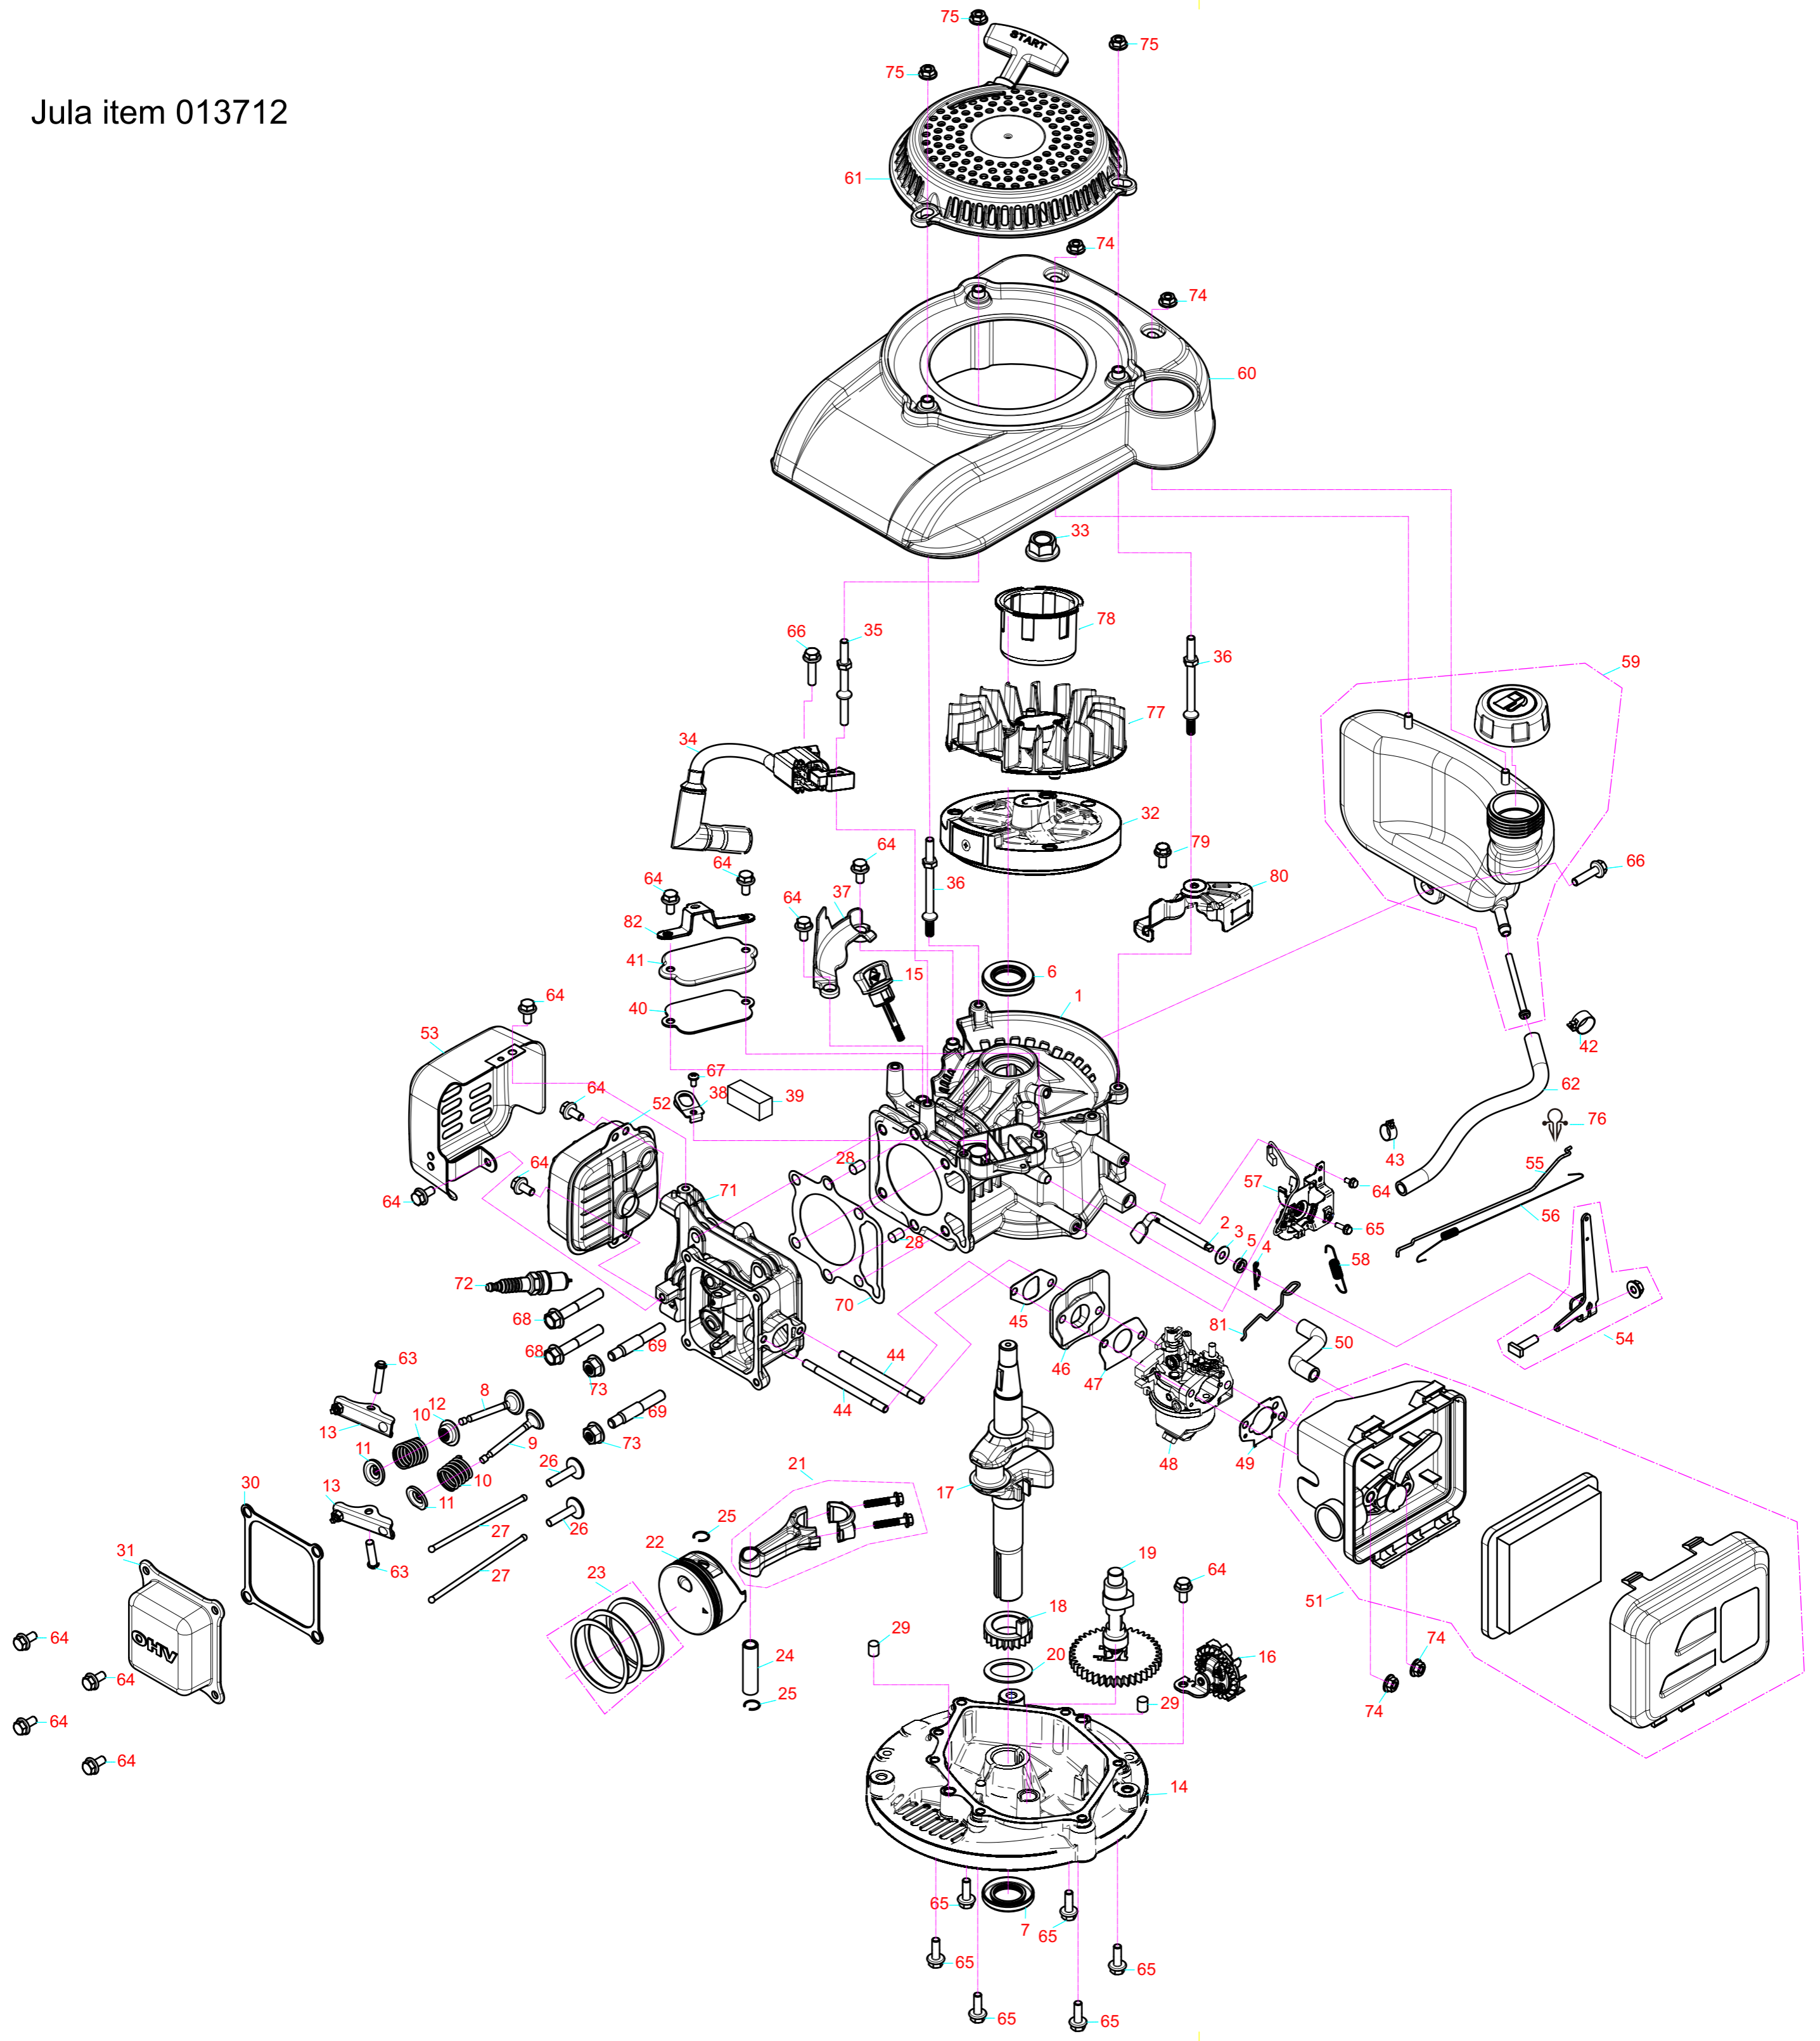


013712 Engine Spare Parts List

Pos.	Spare Part Name	Quantity
1	Crankcase Body	1
2	Speed Control Swing Rod	1
3	Speed Control Swing Rod Gasket	1
4	Swing Bar Locking Clip	1
5	Swing Rod Oil Seal	1
6	Oil Seal, 21.7*41.3*6	1
7	Oil Seal, 22.9*36.4*6	1
8	Intake Valve	1
9	Exhaust Valve	1
10	Valve Spring	2
11	Valve Spring Seat	2
12	Oil Seal on Intake Valve	1
13	Rocker Assy.	2
14	Crankcase Cover	1
15	Oil Dipstick	1
16	Speed Control Gear Assembly	1
17	Crankshaft	1
18	Spur Gear	1
19	Camshaft Assy.	1
20	Crankshaft Gasket	1
21	Connecting Rod Assy.	1
22	Piston	1
23	Piston Ring	1
24	Piston Pin	1
25	Piston Pin Clip	2
26	Tappet	2
27	Pusher	2
28	Locating Pin 8*10	2
29	Locating Pin 9*14	2
30	Cylinder Head Gasket	1
31	Cylinder Head Cover	1
32	Flywheel	1
33	Nut M14*1.5	1

Pos.	Spare Part Name	Quantity
34	Ignition Coil	1
35	Ignition Stud M6*68	1
36	Ignition Stud M6*82.5	2
37	Air Deflector	1
38	Breathing Valve	1
39	Oil Filter Screen	1
40	Oil Return Chamber Gasket	1
41	Oil Return Chamber Cover	1
42	Ribbon Tube Clamp Φ 11	1
43	Ribbon Tube Clamp Φ 10.5	1
44	Stud Bolt M6*92	2
45	Air Inlet Gasket	1
46	Carburetor Block	1
47	Carburetor Gasket	1
48	Carburetor Assy.	1
49	Air Filter Gasket	1
50	Exhaust Tube	1
51	Air Cleaner Assy.	1
52	Muffler Assy.	1
53	Muffler Cover	1
54	Speed Control Arm	1
55	Throttle Lever	1
56	Fine Adjustment Return Spring	1
57	Speed Controller	1
58	Return Spring	1
59	Fuel Tank Assy.	1
60	Air Fan Cover	1
61	Recoil Starter	1
62	Gasoline Tube	1
63	Rocker Pin	2
64	Bolt M6*12	14
65	Bolt M6*18	7
66	Bolt M6*25	2

Pos.	Spare Part Name	Quantity
67	Screw M4*10	1
68	Bolt M8*50	2
69	Cylinder Head Stud	2
70	Cylinder Head Gasket	1
71	Cylinder Head	1
72	Sparkplug Torch K7RTC	1
73	Nut M8	2
74	Nut M6	4
75	Nut M6	3
76	Line Card B	1
77	Flywheel Fan	1
78	Starting Sleeve	1
79	Bolt M6*12	1
80	Engine Swich Fixing Plate	1
81	Choke Push Rod	1
82	Ignition Coil Holder	1

Jula item 013712

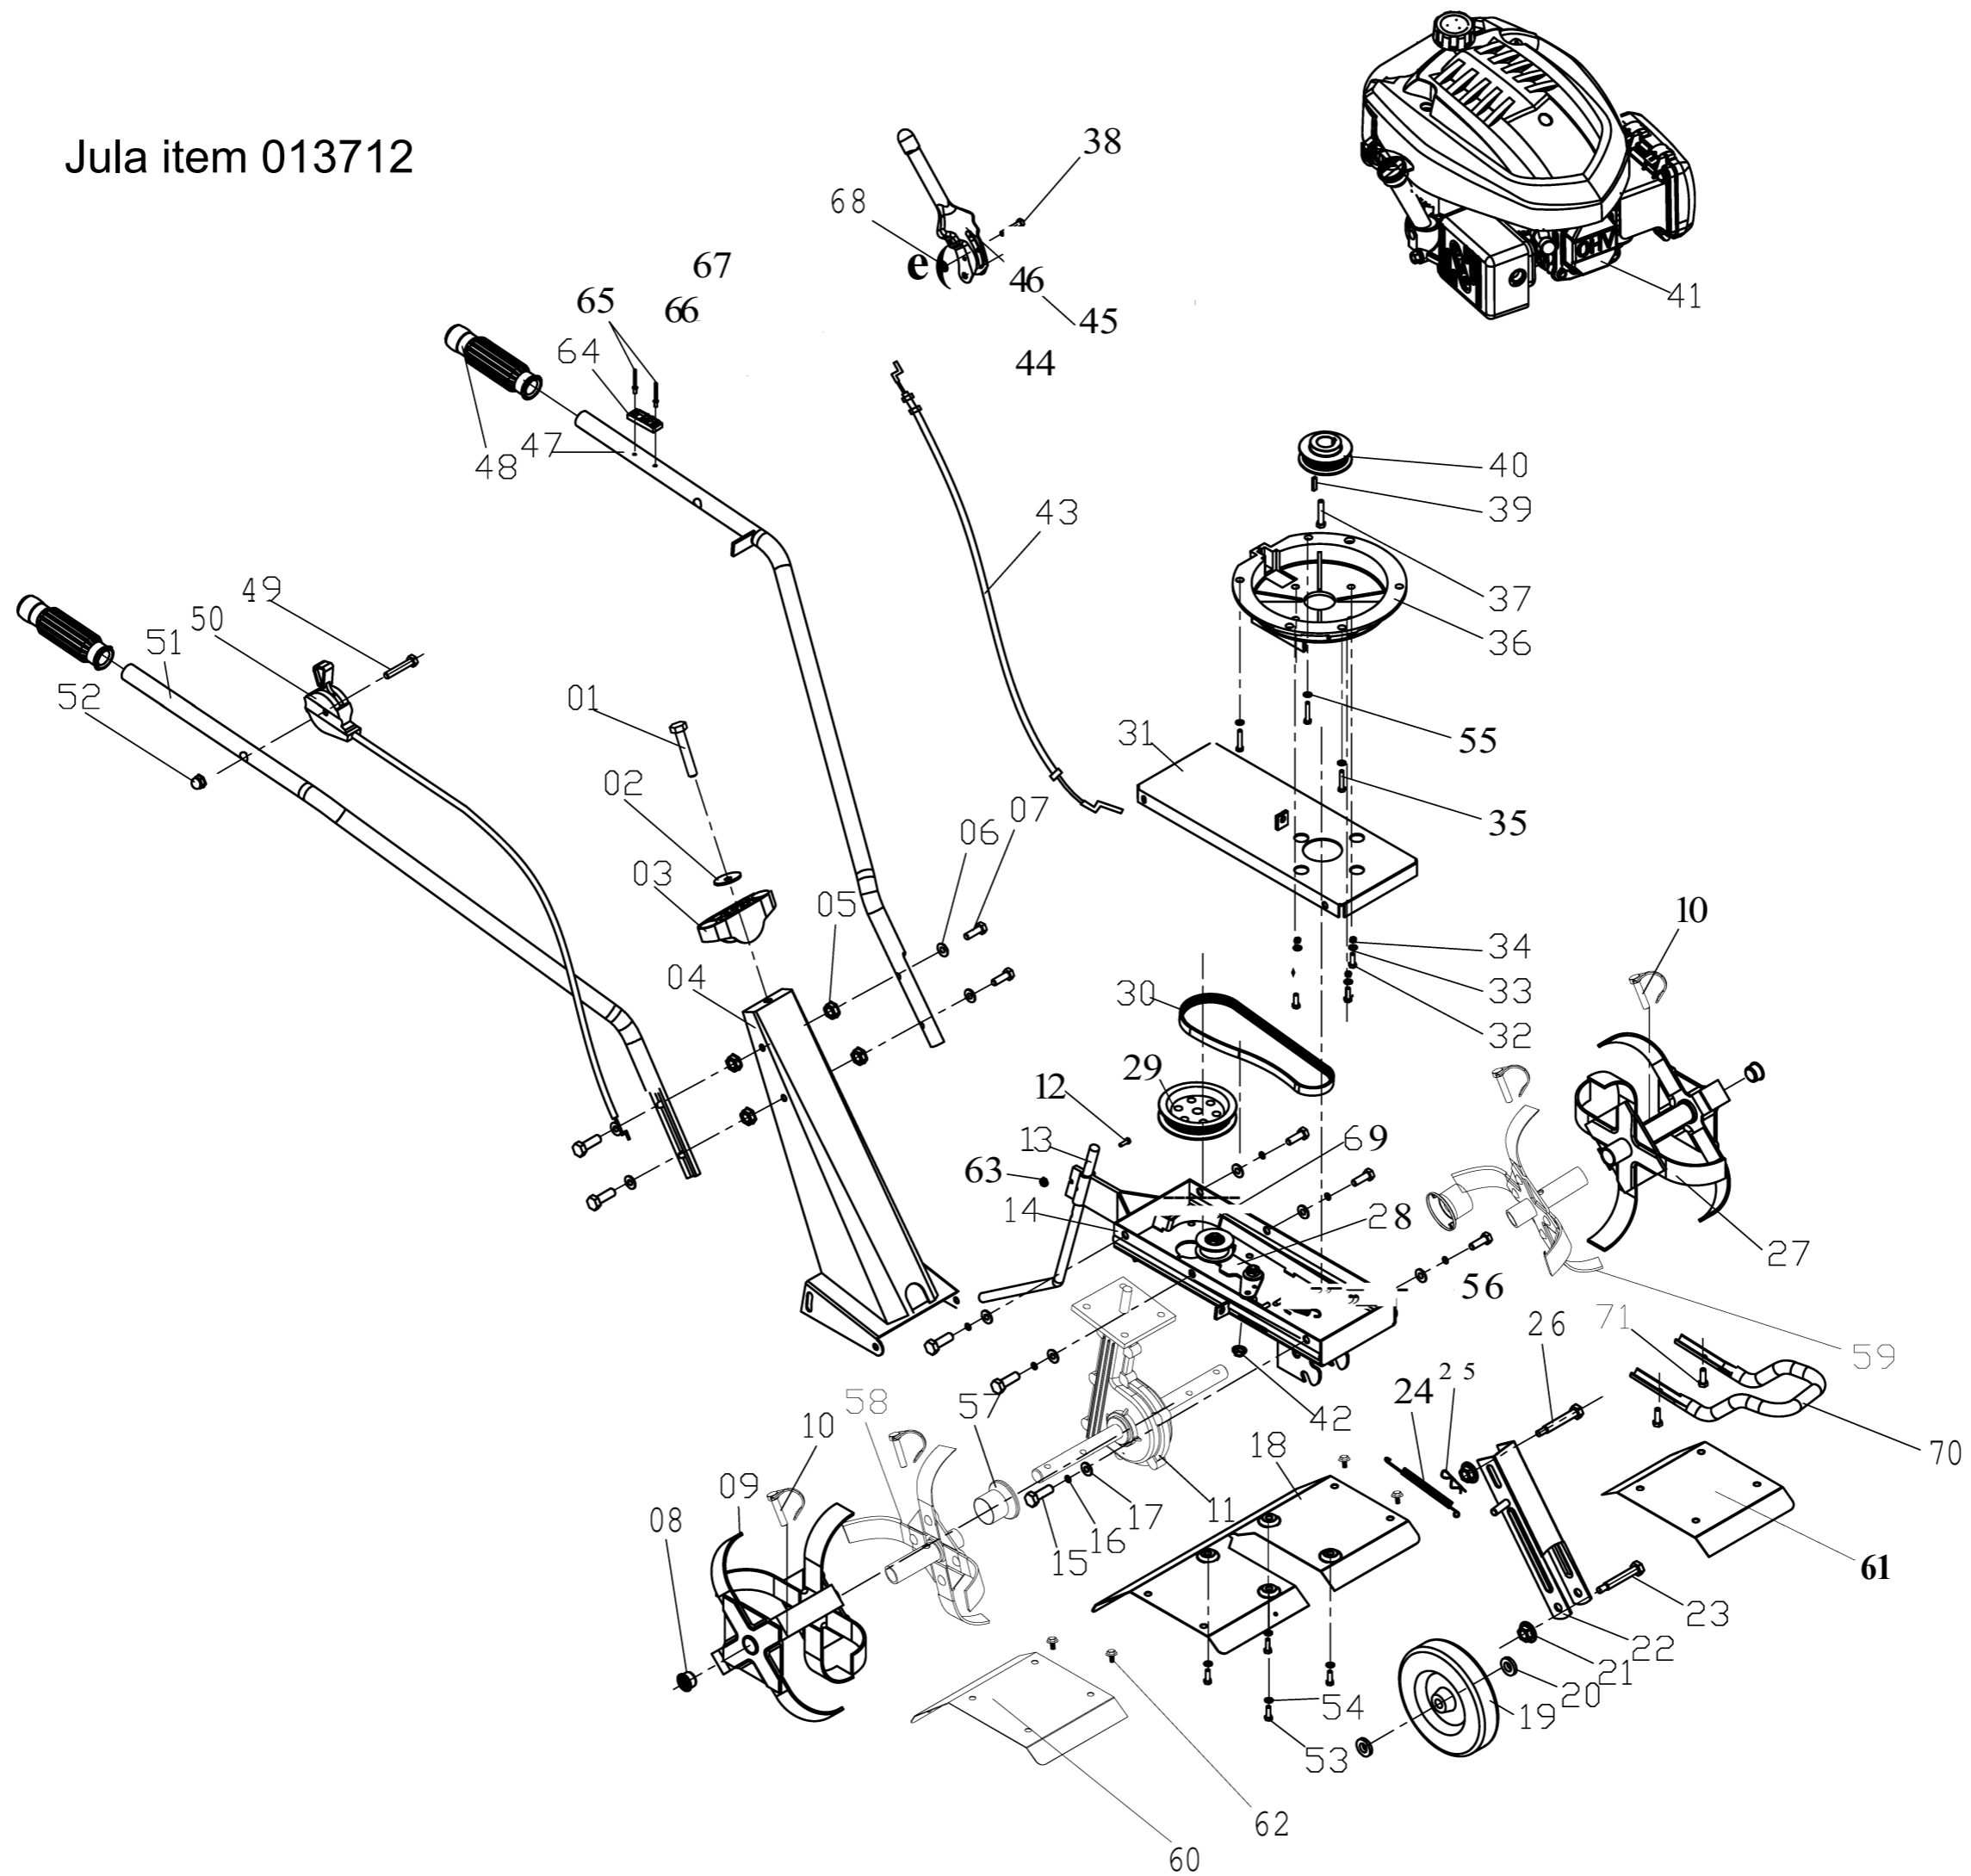

013712 Rotavator Spare Parts List

Nos.	Spare Parts Name	Quantity	Note
1	Bolt M8×25	1	
2	Flat Washer \varnothing 8.4x \varnothing 24x2	1	
3	Handle Fixer	1	
4	Handle Bracket	1	
5	Nut M8	4	
6	Flat Washer \varnothing 8.4x \varnothing 24x2	4	
7	Bolt M8×30	4	
8	Plastic Plug	2	
9	Right Blade	1	
10	Fast Pin	2	
11	Aluminum Gearbox	1	
12	Bolt M6X35	1	
13	Depth Limiter	1	
14	Gearbox Fixing Board	1	
15	Bolt M8×25	6	
16	Spring Washer \varnothing 8	6	
17	Flat Washer \varnothing 8.4x \varnothing 24x2	6	
18	Mudguard	1	
19	Wheel	1	ROHs standard
20	Nylon Washer	2	
21	Nut M8	1	
22	Wheel Fixer	1	
23	Wheel Axle	1	
24	Spring	1	
25	Pin	1	
26	Bolt M10x65	1	
27	Left Blade	1	
28	Tension Wheel Assy	1	
29	Pulley	1	
30	Belt	1	
31	Belt Cover Assy.	1	
32	Bolt M8×16	4	
33	Flat Washer \varnothing 8.4x \varnothing 24x2	4	Not used any more
34	Nut M8	4	Not used any more
35	Bolt M8x25	3	
36	Engine Fixer	1	
37	Bolt M10X35	1	

013712 Rotavator Spare Parts List

Nos.	Spare Parts Name	Quantity	Note
38	Bolt M5*35	1	
39	Pin 4.7*4.7*30	1	
40	Driving Pulley	1	
41	Gasoline Engine DB475	1	
42	Nut M8	1	
43	Clutch Cable	1	
44	Nut M8	1	
45	Clutch Handle	1	
46	Bolt M8x45	1	
47	Left Handle Assy.	1	
48	Handle	2	ROHs standard
49	Bolt M6x45	1	
50	Throttle Cable	1	
51	Right Handle Assy.	1	
52	Nut with cover M6	1	
53	Bolt M8x25	4	
54	Flat Washer \varnothing 8.4* \varnothing 16*1.6	4	
55	Flat Washer \varnothing 8.4* \varnothing 16*1.6	3	Not used any more
56	Tension Wheel Spring	1	
57	Dust Cover	2	
58	Right Blade, small	1	
59	Left Blade, small	1	
60	Right Mud Plate	1	
61	Left Mud Plate	1	
62	Bolt M8X16	1	
63	Screw M6	1	
64	Positioning Plate	1	
65	Rivet \varnothing 4*16	2	
66	Return Lever	1	
67	Return Spring	1	
68	Nut M5	1	
69	Belt Protection Plate	1	Not used any more
70	Lift Handle	1	
71	Bolt M8X25	2	