



ReadyFit RF20 (747020) & RF20Alu (748020) ReadyFit RF21 (747021) & RF21Alu (748021)

RF20 = Jula item 002533

RF20ALU = Jula item 002543

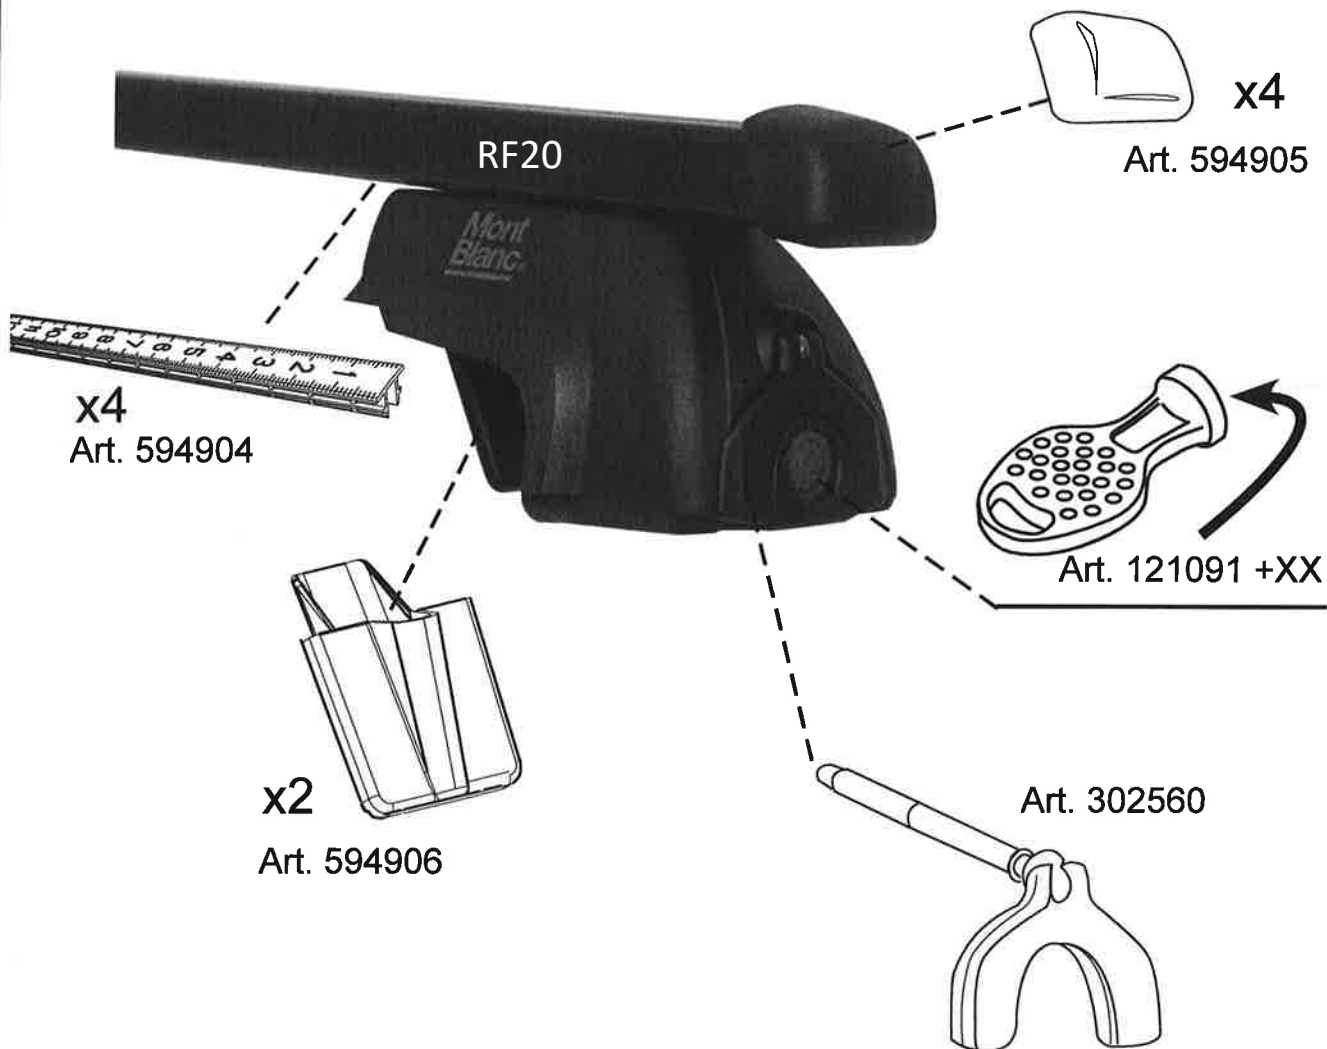

ALU

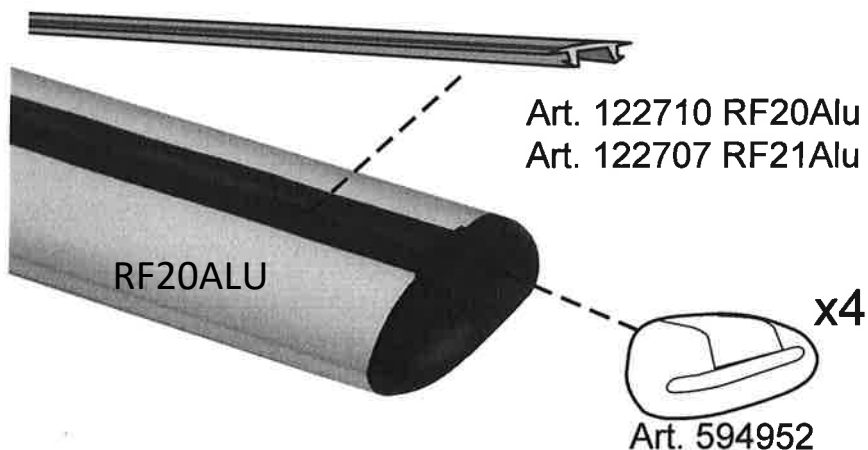

MontBlanc®

MB RoofBar Flex 2

3706 - Kit Sportage 2010 - Hyundai i30 2010
3722 - Kit Golf Sportwagen 2012
3724 - Hyundai Santa Fe 2013

RF RF Alu

DE Montageanleitung	FI Assemblaggio
EN Fit and Instructions	RU Монтаж/инструкция
FR Montage/Instructions	ES Instrucciones de montaje
RU Инструкция по монтажу	IT Istruzioni per il montaggio
PL Instrukcja montażu	PT Instruções de montagem

www.montblancgroup.com

Spare parts Flex ReadyFit Mont Blanc

<u>Slitsskydd</u>	<u>594904</u>
<u>Ändknoppar fyrkantör</u>	<u>594905</u>
<u>Ändknoppar aluminiumör</u>	<u>594952</u>
<u>Rubberguard för RF20</u> <u>(skyddar plåtbrickan på gripperfoten)</u>	<u>594906</u>
<u>Nycklar - plast röda</u>	<u>121121</u>
<u>Lås - plast röda</u>	<u>121120</u>
<u>Hävarm RF (lång skruv med "hästska")</u>	<u>302560</u>
<u>och sargsprint 27336 levereras tillsammans</u>	<u>.</u>
<u>Gummilist 250 cm</u>	<u>122715</u>

Mont Blanc Snowsport Ridge Alu Fit Jula item 002542



Nycklar av plåt för skidhållare 728151